


INSTRUCTIONS FOR SKID REPLACEMENT:

1. Remove existing Bolts using the included Allen Head Wrench.
2. Pull off the Old Skid and remove the existing Nuts from the Old Skid.
3. Reinsert the existing Nuts into the New Skid.
4. Slide the New Skid into the walker leg and reinsert the existing Bolts. Tighten the existing Bolts with the included Allen Head Wrench.

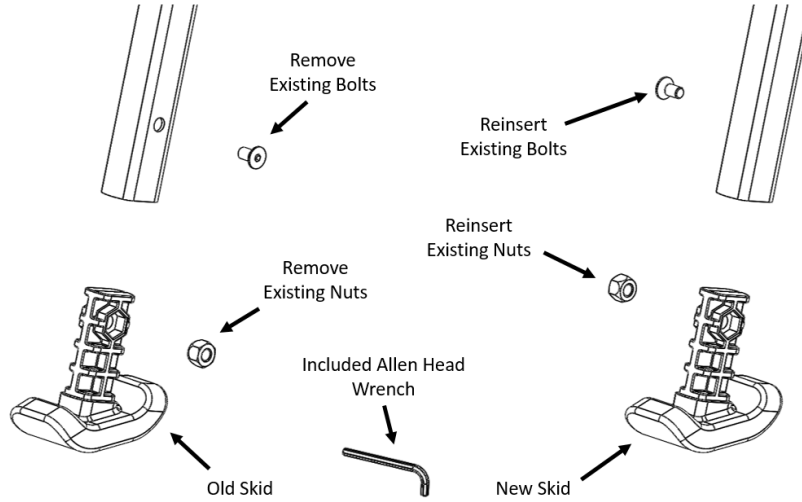

Skid Replacement V 1.0